

BRIDGE-MATE™

Bridge Component Encapsulant

Application Tip Sheet

1. PREPARATION:

- A. Remove any loose, flaky rust with a wire brush
- B. Make sure the surface is completely dry
- C. **BRIDGE-MATE™** is a ready to use product **DO NOT DILUTE**
- D. Stir or shake **BRIDGE-MATE™** container to assure product is blended well

2. APPLICATION:

- A. Apply the **BRIDGE-MATE™** with **RHOMAR's** 3-Gallon Applicator or with a paintbrush or roller
- B. Let **BRIDGE-MATE™** dry for approximately 3-4 hours.
- C. Clean-up of **BRIDGE-MATE** is simple, just use mineral spirits

3. COVERAGE:

The coverage is approximately 300-400 sq ft per gallon

4. AREAS OF APPLICATION:

Bearings, beam ends, any concrete surface

CALL TOLL FREE TO REORDER

